

Tuner Features and Operation (All Turbo Models) 9

If the radio has been delivered in the European tuning mode, switching to the U.S. mode can easily be done following these steps:

1. Turn the radio OFF using the volume control switch.
2. Remove and reinstall the radio. DO NOT ENTER THE ANTI-THEFT CODE YET.
3. Turn the radio ON.
4. Depress the Tuning Mode (T•MODE) switch and the Band (BAND) switch simultaneously.
5. Release both switches.
6. Enter your correct anti-theft code.
7. Check the tuning spacing as shown on the chart below.

To reverse the tuning mode, repeat the procedure.

	Band	Frequency Range	Steps
U.S.	FM	87.9 - 107.9 MHz	.2 MHz
	AM	530 - 1710 kHz	10 kHz
EUROPE	FM	87.5 - 108.0 MHz	.1 MHz
	AM	531 - 1602 kHz	9 kHz

select the
"WB" will
its of the
omatically
er station
generally
on for the

the band
urn you to

strong
will
continue
can be
still
er band
(BAND)

U.S. and
red to the
To identify
radio and
Note the
for each